



HOW TO OPERATE YOUR UNDERCOUNTER DISHWASHER





The word FIL will scroll across the display during the fill and heat process.

When complete, a temperature will

display in the screen

Open the door. Place the rack of items to be washed in the unit. Close the door.





Press a button for the wash cycle you need. 1st cycle for glasses or 2nd cyle for dishes. When complete, the word *End* will appear and the unit will beep.

Press the on/off switch once.

HOW TO RUN A CLEAN CYCLE, TAKE APART AND CLEAN YOUR UNDERCOUNTER DISHWASHER

STEP 1



Open the door and remove the dishrack (if there is one in

Take Apart



Remove the strainer pan

Take apart



Remove the overflow pipe

STEP 2



Close the door and press the drain cycle button once

Run a clean cycle



The word $E \cap d$ will display when the cycle is over and the machine will beep. You can now open the door and press the off button

The **Clean message** *LLE* will be displayed throughout the drain cycle (which runs approximately

for 3 minutes)

STEP 3



Turn counter clockwise to remove the pump filter

Take apart



Unscrew the lower rinse arm. Lift the wash arm. Remove both and clean.

STEP 4



Unscrew the upper rinse arm. Pull the wash arm. Remove both and clean.

STEP 5



Remove centre support. Clean both sides.

Take apart



Remove front support (located beneath the bottom edge of the door). Clean well both sides.



Turn the ring gasket Clean out any on the centre post residue left in the counter clockwise tank. to remove. Clean it.



Manual cleaning STEP 6



If not done already, clean and wash all removed parts. You are now ready to reassemble.

STEP 7

Put back ring gasket turning clockwise to lock position.



Put back the front support.

Reassemble



Put back the centre support.



Put back the upper wash and rinse arms.



Tighten the upper rinse arm gently.



Put back the lower wash and rinse arms.



Tighten the lower rinse arm gently.



Put back the pump filter turning clockwise to lock position.



Put back the overflow pipe.



Put back the strainer pan.



Now the unit is ready to operate or to switch off.