

# Installation Instructions for RESTRAINING DEVICE *(For Use with Castered Appliances)*

## Restraining Device Required per the Following Standards:

ANSI Z21.69/CSA 6.16 Gas Connectors for Moveable Gas Appliances  
 ANSI Z21.41/CSA 6.9 Quick Disconnect Devices  
 ANSI Z83.11/CGA 1.8 Commercial Gas Ranges  
 ANSI Z83.12/CGA 1.9 Commercial Gas Ovens  
 ANSI Z83.13 Commercial Gas Fryers  
 ANSI Z223.1/NFPA 54 National Fuel Gas Code Section 5.5.1.e  
 CSA - B149.1 Natural Gas and Propane Installation Code



### ***This Restraining Device Must Always Be Connected When the Appliance Is in Service***

The restraining device should be disconnected for movement, such as, servicing or cleaning, ***only after gas has been shut off and the connector has been disconnected!***  
 Reconnect restraining cable ***before*** reconnecting the gas connector and moving back to its original position.

Please refer to installation instructions tag on every connector for detailed information, as specified in ANSI Z21.69/CSA 6.16

Note: The gas connector must be installed in accordance with the National Fuel Gas Code (ANSI Z223.1/NFPA 54) and any State or Local Code requirements.

Dormont Manufacturing Company makes no warranty, representation or condition of any kind, express or implied (including any warranty of merchantability or of fitness) and none shall be implied by law. Dormont shall not be liable for incidental or consequential damages.

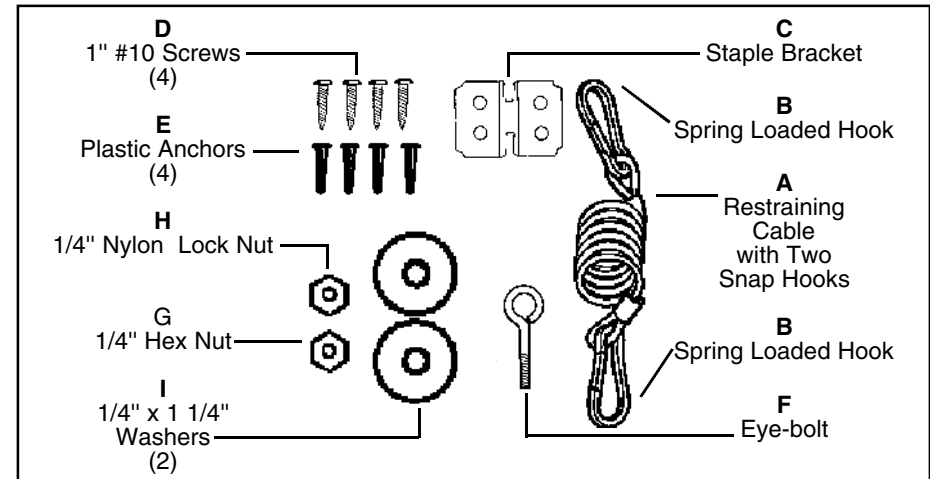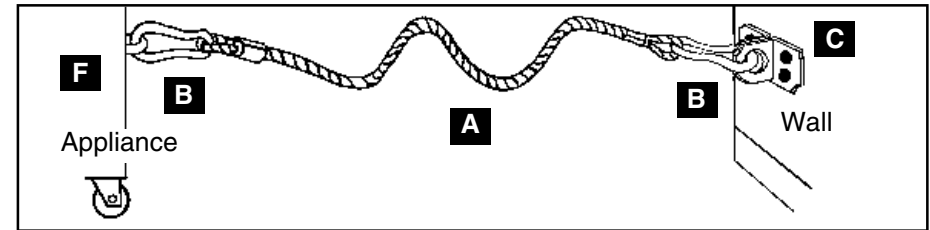

1. Restraining Device should be installed parallel (in line) with the gas appliance connector.
2. Attach the staple bracket (C) to a stud in the wall, using the four 1" #10 screws (D) and the plastic anchors (E), if needed.
3. Locate a structural area (frame) on the rear side of the equipment that is in line with the wall attachment. Drill a small hole 1/4" (per manufacturers' recommendation). Please use caution when drilling hole, so that internal components are not damaged.
4. Thread the hex nut (G) and slide one washer (I) onto the eye-bolt (F). Slide the eye-bolt through the drilled hole and place a washer (I) and the nylon lock nut (H) onto the eye-bolt on the inside frame of the equipment and tighten securely.
5. Attach one of the spring-loaded hooks (B) to the mounted bracket on the wall (Step 2) and the other to the eye-bolt (Steps 3 and 4).

**Note:** For adjustable restraining devices, the cable is manufactured to be shorter than the length of the gas connector.



6015 Enterprise Drive, Export, PA 15632  
 724-733-4800 • FAX: 724-733-4808  
 www.dormont.com

**Call 1-800-DORMONT (367-6668) for additional information**